

Software Installation - (Initially for Dealers)

Congratulations on your purchase of the Joyride™ system system.



Caution: Start the engine and keep it running for about 30 minutes so that the backup battery is fully charged. If the backup battery is not fully charged before software is installed, the system will malfunction.

When the operating system software is initially loading, do not turn the ignition (ACC power) switch off. Also, avoid pressing any button, keys or reset buttons. Hardware failures may result. If the operating system software has not yet been installed, follow the instructions below.



To install the Joyride™ system operating system software—

1. Turn on the vehicle ignition and start the vehicle.
2. Confirm the following screen before proceeding.



3. Insert the CD installation disc, Joyride™ System Software for Large & Small Display into the in-dash DVD drive.



4. The Joyride™ system will start installing the operating system (OS) software. The system will know if you have a configuration for large screen by evaluating if large screen hardware is installed and then install the large screen OS. If no large screen hardware is installed then the small screen OS will be installed.
5. **Reset Recommended** - After the OS is installed, a reset is recommended. Insert ballpoint pen into reset button as indicated on page xxvi.
6. Press the **Power** button on the faceplate or press the **Power On bar** on the left side of the remote controller to turn the Joyride™ system ON.



CAUTION: DO NOT Press the Reset button while ACC (ignition) is OFF. This will cause all software to be deleted and a complete reinstall of all software will be required.



QUICK START

If you want to talk to the Joyride™ system, you must first “wake it up.”

Joyride™ System Wake-up Command

It's important to learn how to use speech commands as the only “hands free,” safe method of operation.

As a safety feature, the Joyride™ system™ is fully voice-enabled to allow you to operate the system so that your attention to the road is not interrupted. The speech recognition engine, developed by Lernout & Hauspie®, lets you control the Joyride™ system with words or phrases called Voice Commands.



When you issue the wake up command “**AutoPC**” or press the Push-to-Talk (**PTT**) button, the Joyride™ system plays a wake-up tone (🎵) to let you know that it is ready and waiting for the next speech command. See Command Words Available in this section.

After it “wakes up,” you can speak specific command words, e.g., “**What can I say?**” the Joyride™ system responds audibly with a list of acceptable command words.

If you are using the **remote controller**, you can also press the **PTT** button to **replace** speaking the “wake-up” word.



Learning the Joyride™ System Controls

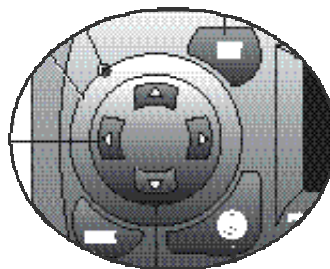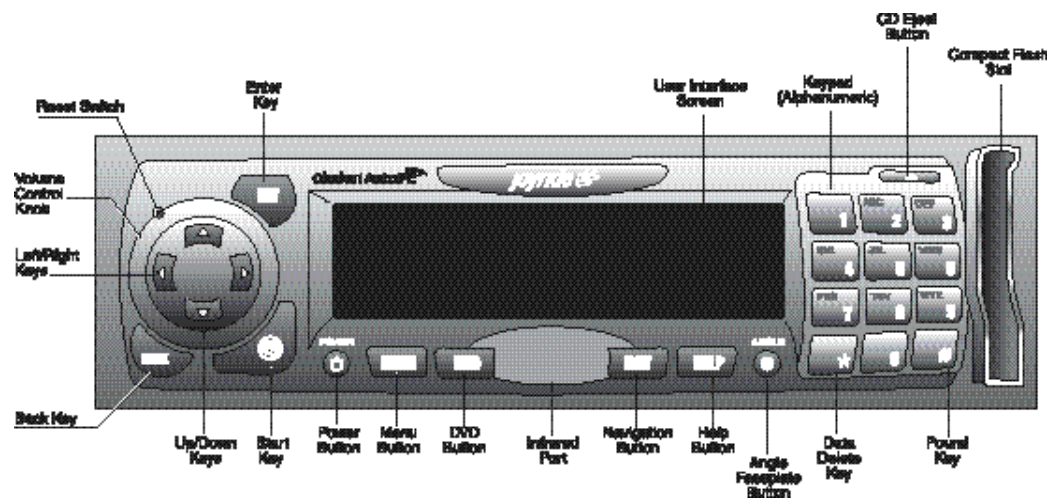

Navigation keys - a collection of the Left, Right, Up, Down, Enter, Back and Start keys.



Watch for the
Green “Listening
bar” before
speaking

Timeout and Listening Bars

While the Joyride™ system is TALKING, a **Blue** timeout bar displays across the bottom of the screen; it disappears after the Joyride™ system stops talking. The Joyride™ system does not accept voice commands while the Blue bar is displayed.

After you say “AutoPC,” the Joyride™ system responds by announcing the current program name.

In response to the “wake up” word, the Joyride™ system LISTENS to your voice command and displays a Green segmented listening bar (see graphic below) at the bottom of the display.

While you are talking, the **Green** “Listening” bar, along the bottom of the screen, shortens in length to let you know how much time you have left to issue your command.

Speak your command words while the **Green Listening bar** is displayed.



— **Blue** bar – Joyride™ system is TALKING.

— **Green** bar – Joyride™ system is LISTENING to your command.



**DVD and CF Player
must be trained
after initial
software
installation, and
must be selected as
Global Commands
via Setup**

Global Command Words Available

Global commands are Voice Commands that are available after you “wake up” the Joyride™ system: What can I say?, What time is it?, Help, DVD Player, CF Player, CD Player, Voice Memo, Address Book, Messages, Volume, Mute, Clock, Setup, Navigation, Radio, End, Auxiliary and Audio. You must voice train additional command words that are not yet available. See “Custom Commands” below.

Program Level Commands

Program level commands such as Stop, Random, Select, Dial, Traffic, Email, News, are commands that are local and specific to each program. Say **“What can I say?”** within a specific program to hear its local commands.

Custom Commands

Custom commands differ from Global commands in their purpose. You train a custom speech command to fine tune your voice inflections so that the Joyride™ system recognizes your voice. You can also train a custom command to substitute another word for a global command. See Chapter 8 Using Setup, “Setting Custom Command Options.”









Training Speech Commands

You can replace existing Global command words by selecting unused word options. You can also speech train words from Custom commands to add commands.



**Frequent data
backup is highly
recommended**

1. Press the Start key to select Setup. OR press  (small screen) /  (large screen) to select Setup. Press ENT to display a list of options.
2. Press  to select Speech Commands, and then press ENT.
3. Press  to select Global Commands (or Custom Commands), and then press ENT to view a list of Command Word options.
4. Press  to select a word from the list of 10 basic global commands.
5. Within each basic category, press  to display a list of unused words that can be selected to replace the selected global command.
6. For the Custom Commands option, the word to train appears at the top of the screen. Instruction "Say Command Word 3 times" appears. Press ENT to begin recording the word. Listen for the prompting "tone." Yellow bars will start filling the first of three boxes. Say the given word after each prompting tone – do this 3 times.




Adding a New Contact to Address Book



1. From the Address Book List main screen, press **4** to select the letter representing the first letter of the last name for your new entry.
2. (Option 1) The system prompts you to enter a new contact name: <No entry. Add New?>. Press **ENT** to display a keypad graphic for data entry.

(Option 2) Alternately, you can press **MENU**, then press **4** to select the **New Entry** option. Press **ENT** to display a keypad graphic for data entry.
3. If the selection you make already has a contact stored, press **MENU**, then press **4** to select **New Entry**. Press **ENT** to enter a new contact name.

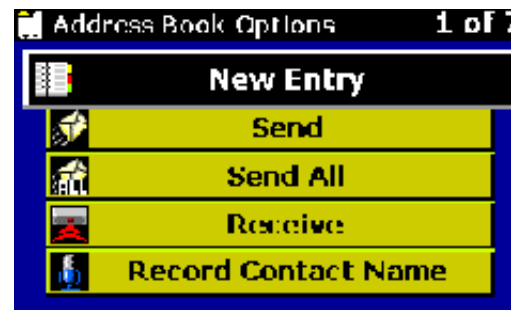



4. **For Small screen**, use the faceplate or remote keypad to enter information. To capitalize a letter, press to display upper case letters. The Joyride™ system automatically advances to the next box. If you make a mistake, press "*" to backspace and delete the last character. Then, press to move to the next space. To insert a blank space, press "#."

For Large screen, use the faceplate or remote keypad OR use the navigation keys to navigate to a letter, then press ENT to register the letter onto the Text Input field. If you make a mistake, press "*" to backspace and delete the last character. Then, press to move to the next space. To insert a blank space, press "#."

5. Once you have entered the entire name: for Small screen, press **ENT**; for Large screen, navigate to the Done button and press **ENT**. The system will next prompt you to enter a Work number.



6. Enter a **Work** number using the keypad.
7. When you are finished, press **ENT**. (To skip this step press **ENT**.) The system will next prompt you to enter a **Home** number or **Home address**.
8. Enter a **Home** number using the keypad.
9. When finished, Address Book confirms the entry. Press **BACK** to return to the Address Book List screen.
10. When finished, the system asks whether you want to record the contact name. Press **⬅➡** to select "**Yes**" if you want to record a contact name, and then press **ENT**. The **Record Name** screen appears. Follow the prompts. Press **ENT** to start recording. The recorded voice now assigned to this contact is known as a "voice tag." You can use this voice tag to speak the contact name instead of searching manually in Address Book.



Address Book List now displays the contact name. Notice that the address is not complete. To enter additional information, like the city, state, postal, country, an additional Work or Home, e-mail, Fax, birthday and other information:




1. Locate the contact name and press Enter. Next, press Menu, then press **⬅➡** to select **All Contact Details**. Press **⬅➡** to set this option to "**Yes**."



Quick Start

2. Press **BACK** to return to the contact name. Notice now you have many additional topics for updating a contact's profile. Press  to select the topic you want to update.
3. **For Small screen**, press  to select the Address icon, Phone icon or Information ("i") then press ENT to enter data for additional contact information.

For Large screen, press  to select the Address List tab, Phone List tab or Personal information tab to enter additional contact information.



Adding contacts using Personal Device Assistant's (PDA)

Microsoft compatible PDA's will communicate with the Joyride™ system without special software. Additional software will be required for those PDA's that are not Microsoft CE compatible.



To add contacts using PDA's—

1. Highlight all contacts to be transferred from your PDA to the Joyride™ system Address Book.
2. Select File, Send on PDA.
3. Select Address Book, Menu, Receive on the Joyride™ system.
4. Align PDA IR to the Joyride™ system IR (about 3 inches from each other).
5. Note how addresses are transferred.



Playing the Radio



Using the faceplate—

1. From **Small** display, press the **Start** key OR press **↩** to select **Radio**.
2. From **Large** display, press the **Start** key OR press **⏏** to select **Radio**.

Using the remote controller—

1. Open the bottom half of the remote. Press the **RAD** key to launch **Radio**.
2. Press **ENT** to display the main display.





To “direct select” a station—

1. Select **Radio** from the Start menu, and then press “#” on the keypad.
2. Enter the station frequency (within 5 seconds) using the keypad. For example, press 9-6-5. The Joyride™ system will insert the period automatically. It will then tune into FM station 96.5.
3. To store the station, press and hold 0-9 for 2 seconds on the faceplate controls.

To switch between AM and FM bands—

Using speech commands—

- Say “Auto PC.” Wait for the green “Listening” bar to appear, and then speak the next command.
- Say “FM” to advance to the FM1 band.
- Say “FM” again to cycle through bands FM2, FM3.
- Say “AM” to advance to the AM band.

Using the faceplate—

 
Press the **ENT** key. Repeat the process to advance to the next band.



When a CD is inserted, the Joyride™ system will automatically pull the disc into the system and recognize that it is an audio CD and start the CD Player application

Playing a CD

To insert a CD—



1. Make sure the label on the CD you are about to insert is face up.
2. Insert the disc **halfway** into the CD slot, and allow the drive to pull the disc the remainder of the way. If you have the optional USB CD Changer (UC6), you can also insert discs into it.
3. CD Player will be launched automatically (Auto Launch) and start when a CD is inserted into the CD / DVD slot.

Note: CD Changer does not support "Auto Launch."





Using speech commands—

- Say “Auto PC.” Wait for the green “Listening” bar to appear, and then speak the next command.
- Say “CD Player.”
- To play the next track, say “AutoPC” “Next” OR “Previous.”

Using the faceplate—



1. Press the Start key to select **CD Player**. Press  (small display) /  (large display) to select CD Player, and then press **ENT**.
2. A “Loading...” message appears before the song starts playing.





When a DVD is inserted the DVD application will Auto-Launch. the Joyride™ system will automatically pull the DVD disc into the system and recognize that it is a movie DVD and start the DVD Player application



Playing a DVD Movie








The playing of television broadcasts, movies and videos so as to be visible from the front seat of the vehicle is prohibited in North America. The DVD player is intended for viewing only by passengers seated behind the driver's seat. Therefore, **DO NOT VIEW THE DVD CONTENTS OR ANY OTHER PROGRAM WHILE DRIVING.**

To play a DVD movie—



1. Press the **Eject** button. The faceplate angle changes to expose the CD slot. DVD Player will start playing the DVD movie.



2. If a DVD is already in the DVD slot you can access the DVD Player by doing the following. Press the **DVD button** on the faceplate. Alternately, press the **Start** key to select **DVD Player**. OR press  (small screen) /  (large screen) to select DVD Player. Press **ENT** to display the DVD main screen.
3. Once at the DVD main screen, the movie starts playing; press **ENT** to Pause the movie. Press  to Fast Forward or Fast Reverse a scene.
4. While on the DVD main screen, press **MENU** to access other DVD Player options to view or configure special features of a movie.
5. When the movie appears on the viewing screen, you can use the navigation keys (, , **ENT** and **BACK**) to navigate the menus of the DVD movie. If you have not configured the speakers or headphones (audio output source), see Selecting the Audio Output Device in this chapter.
6. Press  and  to select menus from the DVD disc.





Quick Start

To view the DVD screens—

1. Press the **Start** key to select a program.



2. Press **Enter** to display a main screen.



 
3. From the **main screen**, you get information in two ways: use control keys or press **Menu**.






Use , , **Enter** or **Back** keys to control actions—

- Press the Left, Right, Up or Down keys to display various actions in a program.
- Press the **Enter** key to enable an option.
- Press the **Back** key to return to the previous display or menu.



Press the Menu button to select other levels of information (options). Depending on which program you are viewing, you can:

 - Enable or disable a setting.
- Show or Hide options.
- Adjust audio parameters.



EXPLORING the Main Interface

SMALL DISPLAY

Example of a main screen on small display.



Example of an Options Menu screen after pressing the Menu button.



Example of a Main screen on large display

LARGE DISPLAY




Example of an Options menu on large display.



Status Bar

On large screen displays, a status bar reports the status of a current program or one running in the background, displays the time, audio output device when using headphones, audio volume level and a compass, if you are running the optional Navigation program.

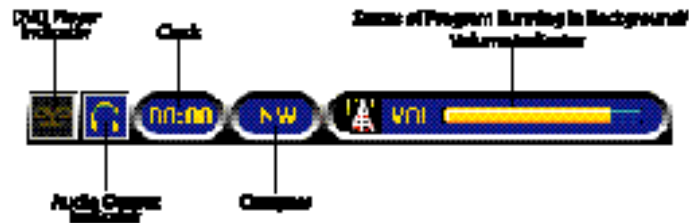

It is highly recommended to frequently backup your data.



joyde User's Manual

